


SKYLINE DESIGN INSTALLATION GUIDE

GLASSBOARDS WITH FORMED METAL BACKER & Z-CLIP (FRAME OPTIONAL)

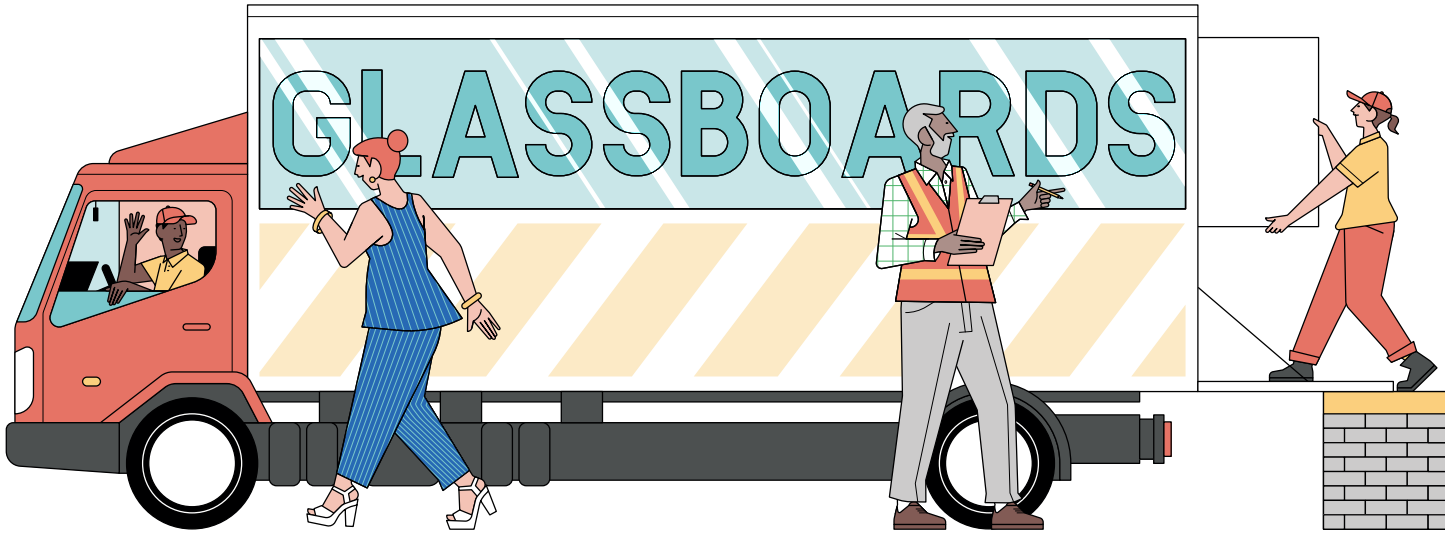

READ BEFORE BEGINNING.

Determine if the glassboard size and weight requires two people for installation. Store and transport the glass panels in the original crate or an appropriate glass L-card with the bottom edge of the glassboard supported by wood or rubber pads. Do not allow any hard or abrasive materials to come in contact with the glassboard.

Magnetic glassboards weigh approximately 5 pounds per square foot. Refer to your qualified installer and hardware specifications to ensure that the appropriate fasteners for your field condition are being used. EG: 8'x4' = approx. 160lbs, 6'x4' = approx. 120lbs.

PARTS INCLUDED

- Z-clip cleat
- Glassboard with metal backer
- Marker rail (add-on)

REQUIRED

- Drill
- Level
- Wall fasteners

Recommended: Size #8, 2" flat head multi material screw with twist-n-lock 75# medium duty drywall anchors



SKYLINE DESIGN INSTALLATION GUIDE

GLASSBOARDS WITH FORMED METAL BACKER & Z-CLIP (FRAME OPTIONAL)


GLASSBOARD

- 1 Draw guidelines on the wall using the metal backer as a guide for z-clip cleat(s) spacing.
- 2 Transfer fastener locations to the hanging z-clip cleat(s) and drill fastener holes in the z-clip cleat(s).
- 3 Level the z-clip cleat(s) and align it with the layout marks.
- 4 Attach z-clip cleat(s) to the wall with appropriate fasteners. Hanging brackets must be straight. Use shims if the wall surface is uneven.
- 5 Lift the glassboard and hang the rounded metal lip over the z-clip cleat(s).


If added protection is needed, double-sided foam tape can be applied to the return at the bottom of the metal backer to keep the glassboard from moving.

Check the distance from top of glass to top of lip on metal backer. Variances between panels will require adjustment to the wall-side z-clip cleat height to compensate for any differences. If necessary, use thin shims on top of cleats.

Attachment Detail

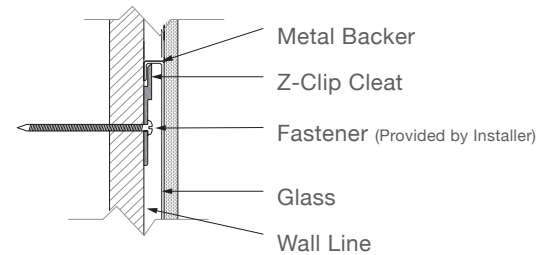

Attachment Detail: DEFINE™ FRAME

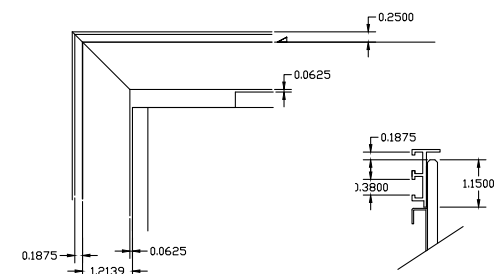

Frame = Glass + .50"
Finished 4-Way Backer = Glass - 2.5"

MARKER RAIL

The face mounted marker rail (optional) is attached using a heavy duty tape, which is already applied to the back.

Adhesive is permanent and cannot be repositioned. Improperly positioned rails must be cut off and repurchased.

- 1 Determine rail location and clean mounting area with the included alcohol wipe.
- 2 Wipe the glass surface where the tape will touch the glass, with the provided adhesion promoter.
- 3 Use a level to position the rail.
- 4 Peel protective strip tape on back of rail. Using the level as a guide, press the rail onto the glass, applying pressure along the full length of rail.

For questions, and to purchase markers & accessories: glassboards@skydesign.com

Skyline Design offers a limited lifetime warranty on glassboards against manufacturer defect or workmanship. See Terms and Conditions for full warranty. Final installation is not the responsibility of Skyline Design.